


— BMW E36

FENDER CUTOUT

SIDE VENT CUTOUT • REFERENCE DIMENSIONS

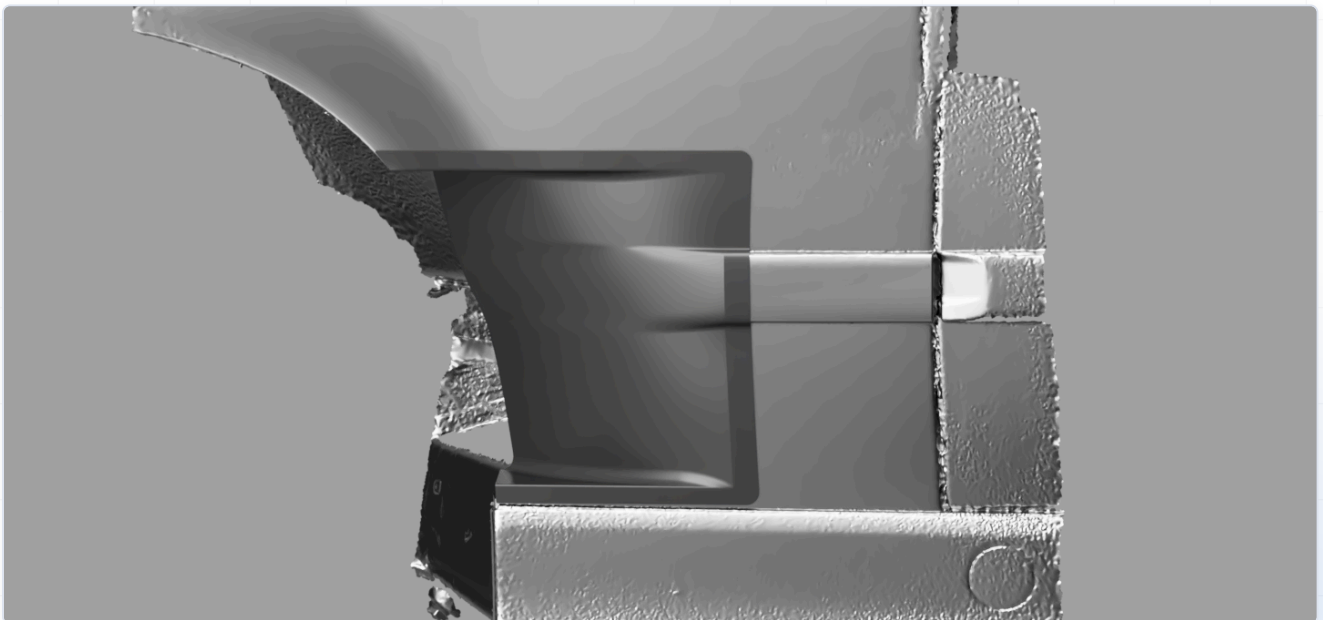

TOP WIDTH

142 mm

BOTTOM WIDTH

143 mm

SIDESKIRT GAP

8 mm

PART NO.

STT-E36-FVENT

SET THE CUTOUT POSITION.

These are the reference dimensions for the side vent cutout. Mark the horizontal width of the opening from the rear reference edge using the two measurements below, then confirm against the scan in Figure 1.

DIMENSIONS · FIGURE 1


1**TOP WIDTH – 142 MM**

The upper horizontal distance to the vent opening measures **142 mm**, as marked in Figure 1.

2**BOTTOM WIDTH – 143 MM**

The lower horizontal distance measures **143 mm** – 1 mm wider than the top, following the panel taper.

FIG. 01 · 142 / 143 MM

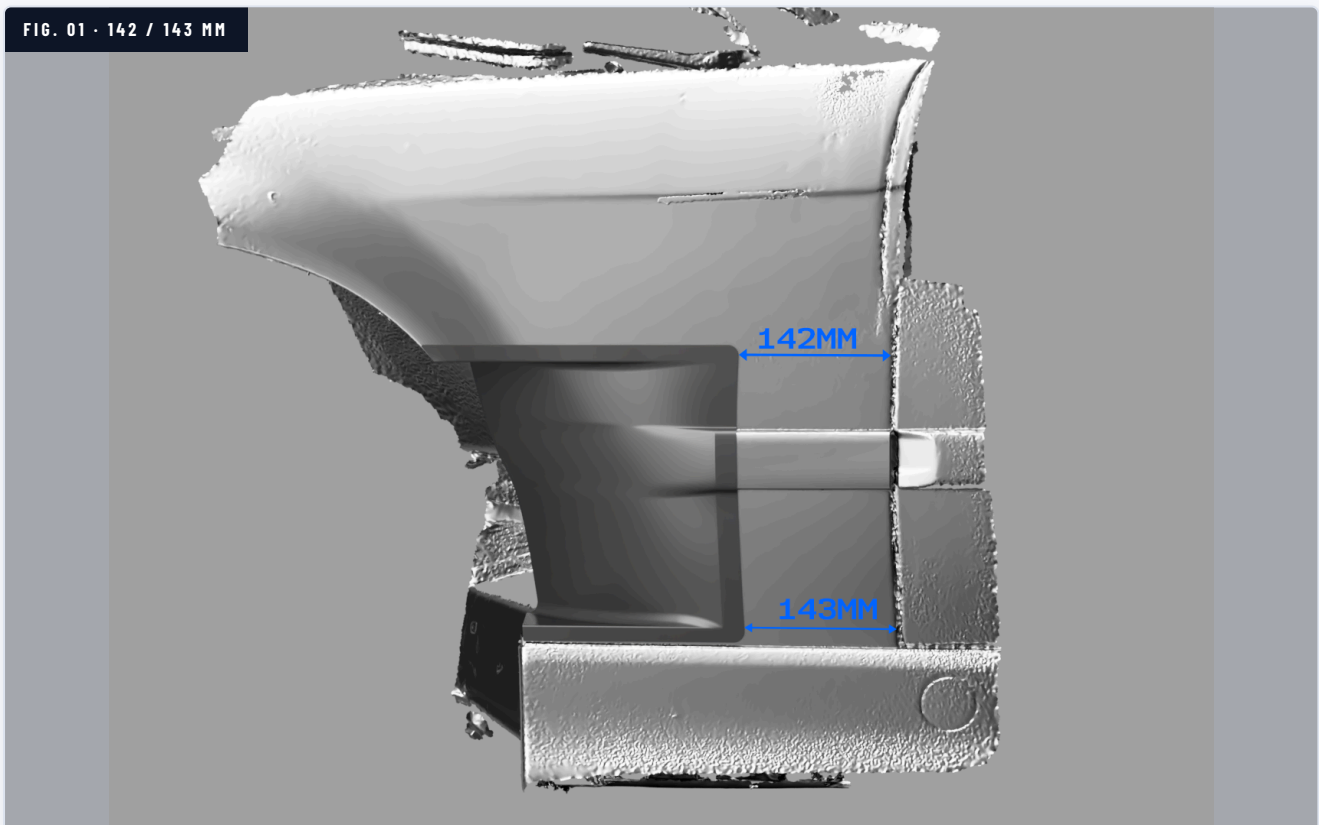

SET THE BOTTOM GAP.

With the cutout width set, confirm the vertical gap at the bottom of the vent. This locates the opening relative to the sideskirt.

DIMENSION · FIGURE 2

1

SIDESKIRT GAP – 8 MM

The gap between the **edge of the sideskirt** and the **edge of the vent** measures **8 mm**, as shown in Figure 2.

FIG. 02 · 8 MM GAP

