

— ST TRACKPARTS · BMW F20 / F21 LCI

F20/F21 LCI BRAKE DUCT INSTALLATION.

INSTALLATION GUIDE · 10 STEPS



WHAT'S IN THE KIT.

● ST-TRACKPARTS BRAKE DUCT L + R

● BLANKING PLATE L + R (INCLUDING HARDWARE)

FITMENT

Fits BMW F20 / F21 LCI. For other models, please check with us before installing.

KIT CONTENTS



01

REMOVE THE WHEEL ARCH LINER


Remove the wheel arch liner.



02

REMOVE THE OIL COOLER


Remove the oil cooler by pressing in the 2 marked clips.

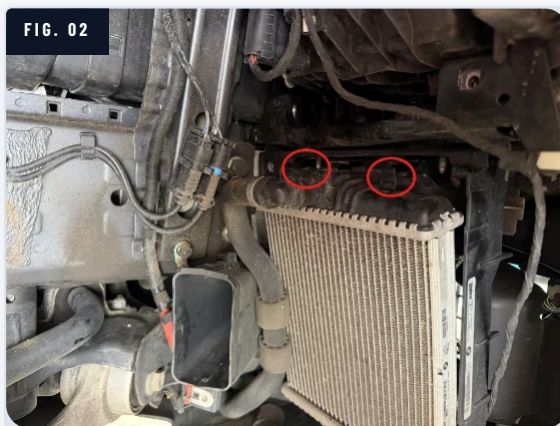

03

REMOVE THE SHROUD

Remove the shroud by undoing the 3 marked bolts.

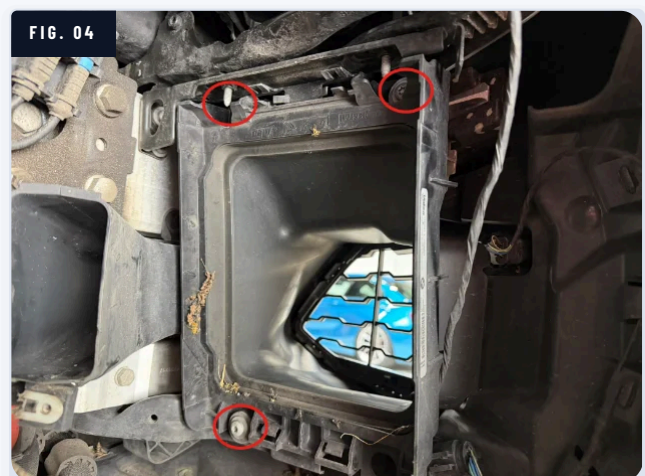

04

UNDO THE BOTTOM CLIP

Undo the bottom clip.



05

UNDO THE BRACKET BOLTS


Undo the top 2 bolts of the bracket and the 1 on the side marked red.



06

REMOVE THE ORIGINAL BRAKE DUCT

Remove the original brake duct.

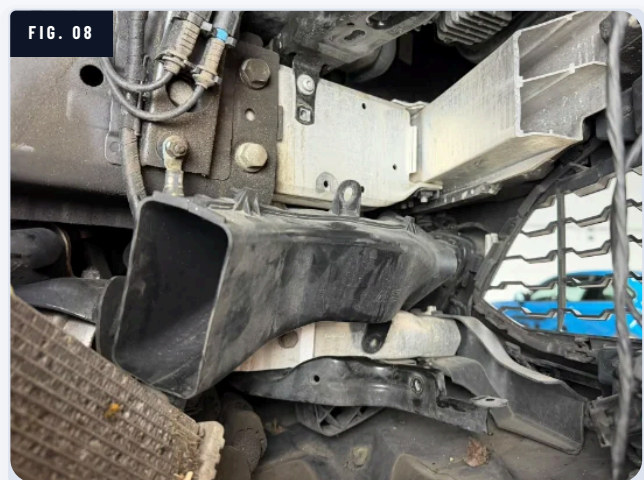

07


INSTALL THE ST-TRACKPARTS BRAKE DUCT

Install the ST-Trackparts brake duct with the original pusher buttons.


08

REINSTALL THE COMPONENTS

Now place back all the components that were removed.

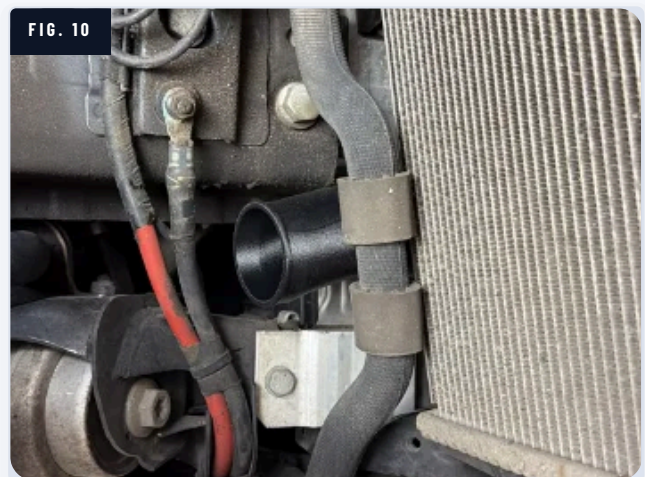
09

INSTALL THE BLANKING PLATE

Before placing the wheel liner back, install the black blanking plate with the notch pointing towards the inside of the wheel arch.



10

CUT A HOLE FOR THE HOSE

Cut a hole in the wheel liner to feed the hose through.

FIG. 12



✓ BRAKE DUCT INSTALL COMPLETE

ENJOY!

The ducts are now fully installed.

ST
TRACKPARTS

NEED HELP?

WE'RE HERE FOR YOU.

If there are any problems or you need any help, reach out — we'll get back to you fast.

→ st-trackparts.com → info@st-trackparts.com