



***ST TRACKPARTS***

**BMW E36/E46 Diffuser  
Install Guide**

1. Build the rear diffuser (red marking):  
Insert the fins into the main plate.  
Connect the diffuser to the extension  
plate (1), and outside fin (2). Use the shorter bolts  
for this (M6x16).

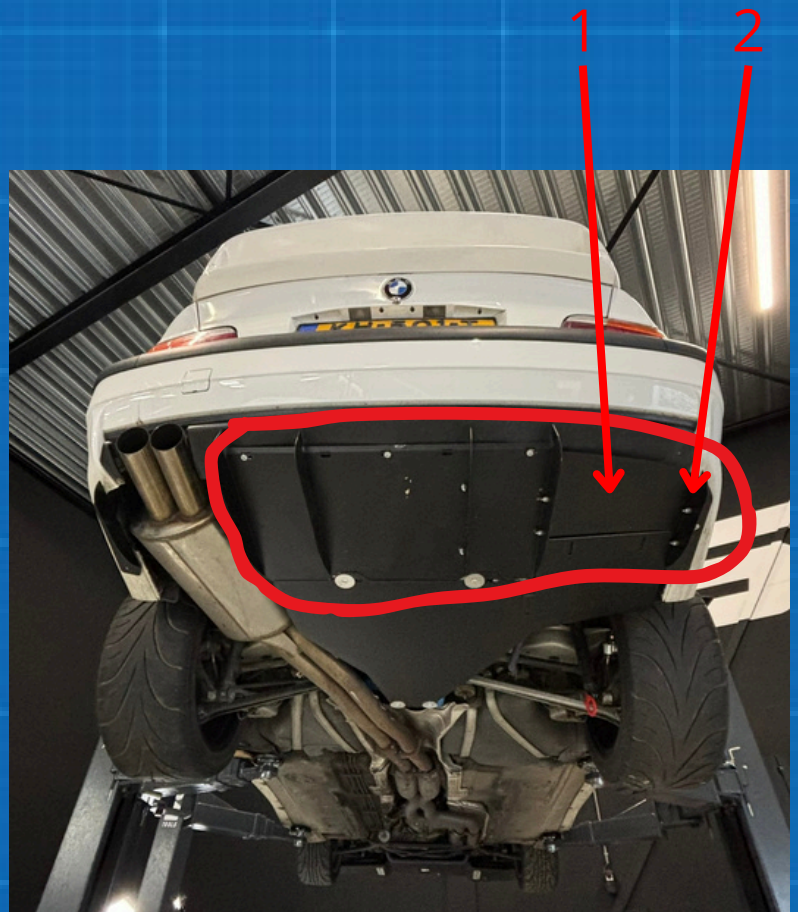

2. Install the rear diffuser on the car.  
Hold the diffuser against the car,  
match the rear of the fins against the rear  
of the bumper (3).  
To center the diffuser, make sure that the  
outside fins match the points (4) on the bumper.

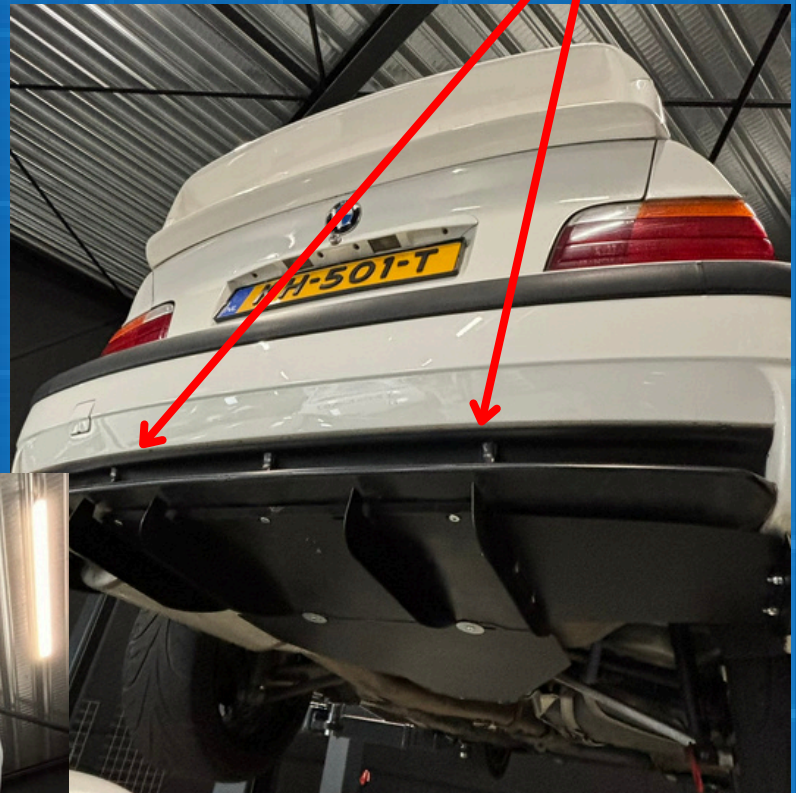



3. Drill the 5 points in the rear bumper (5) with an 8mm drill. Use the impact nuts (6) on the inside of the bumper. Drill larger if needed. While using a rubber bushing between diffuser and bumper, thread a long bolt (M6x35) through the diffuser, bushings & bumper into the impact nut.

Use the bolt to pull the impact nut through. Repeat for all holes and tighten until the diffuser sits flush with the bumper.

6




5



4. Drill the two holes in the chassis with a 6mm drill. Use long bolts (M6x35) with a large 50mm washer on the underside, and a 30mm washer on with a locking nut on the inside of the spare wheel well.

Optional flat floor extension: If you also got the flat floor extension plate, then you can add the extension plate as well with the chassis bolts. Install the included rivet nuts into the subframe (7), extension plate (8), and connecting plate (9). This will allow you to finalize the install of the larger and smaller extension plate.

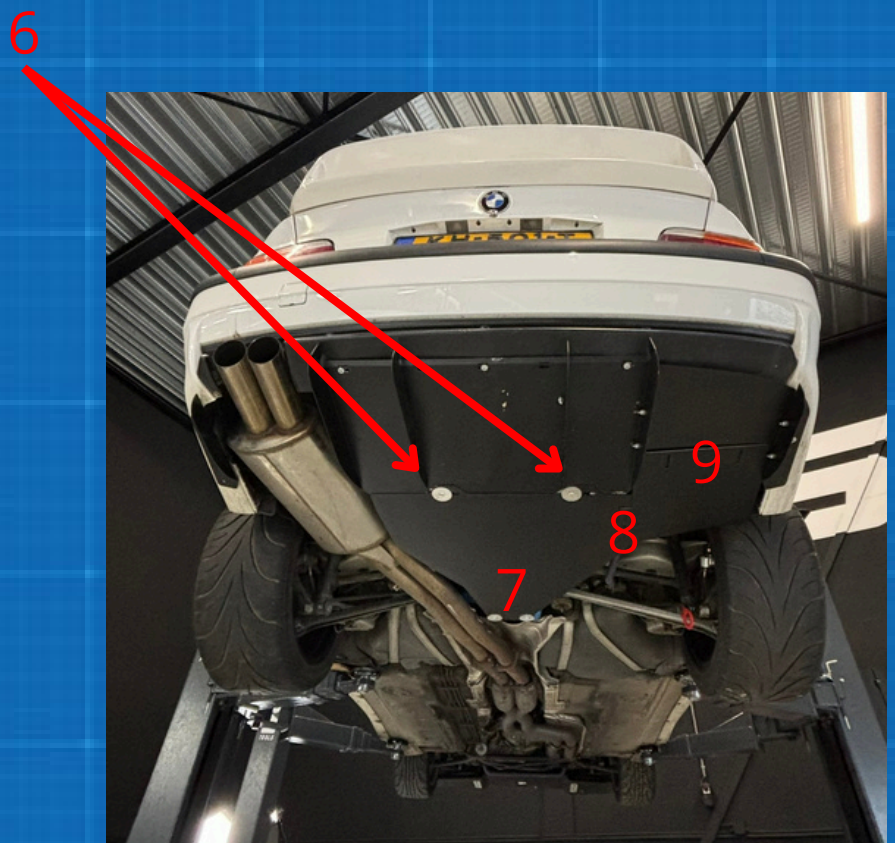

5. Drill the holes for the outside fins (10). Match the left side to the right side. Tighten with suitable bolts and locking nuts on top.



6. Check if everything is tight. Install done!