

ST TRACKPARTS

**E36 Splitter Mounting Kit
Installation guide**

1. Uninstall the bumper from the car.



2. Bolt the two brackets together as follows.



3. Remove the bumper mounts with the four M6 nuts.



4. Install the splitter brackets & reinstall the bumper mounts on top.



5. Tighten the splitter mounts and measure the distance between the two slats.




The distance should be around 72.3 cm. It can vary per car.



6. Drill the first two holes in the splitter. On our car the measurements were 72.3 cm wide and 14.5 cm to the edge is our preference.

However make sure to use your own measurements. (measure twice, drill once!)

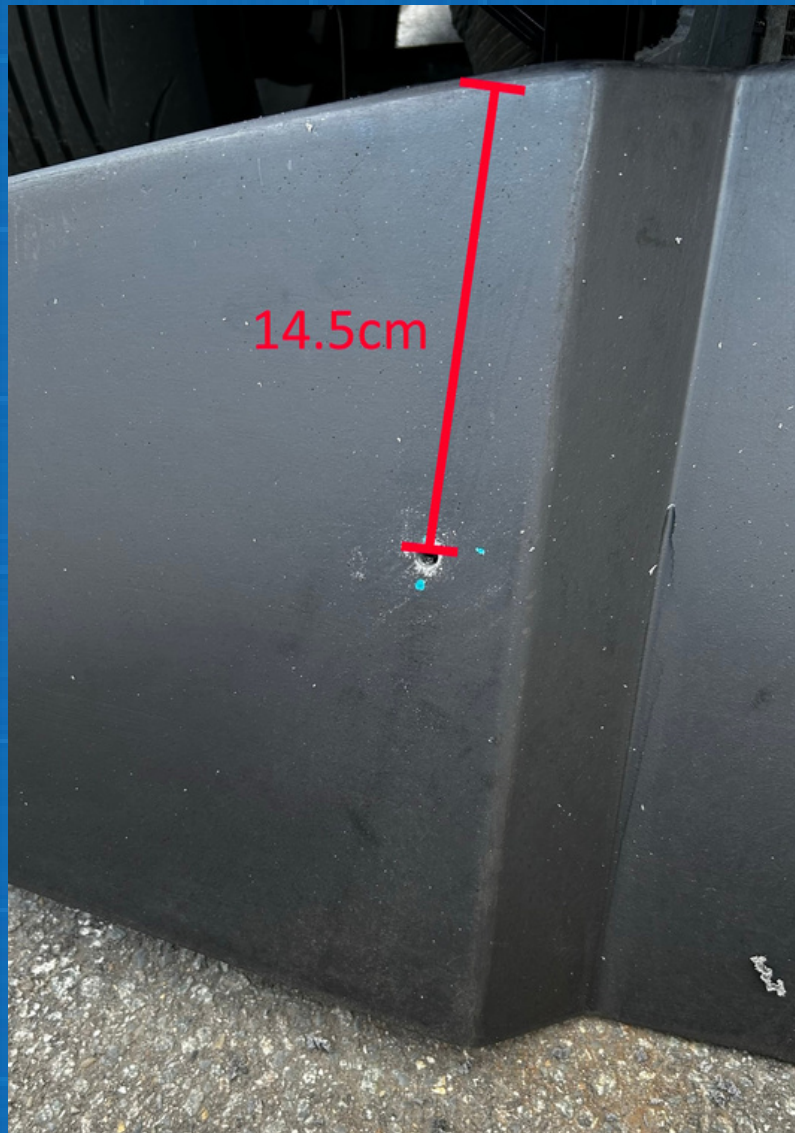

7. Test-fit the splitter on the car. Use the reinforcement plate on the bottom of the splitter, and use the washer plate on top of the splitter bracket. Hand-tighten the splitter to the car.



Washer plate



Reinforcement plate

8. Now mark the 2nd hole in the splitter, using the washer plate as reference.



9. Drill the remaining two holes using your markings. In the end, the reinforcement plates should fit as follows:



10. Insert the nuts into the supplied nut-blocks, using a hammer or vice.



11. Mount the splitter like in step 7, but use all four bolts this time. Use the nut-blocks on top of the washer plate.



12. Test-fit the bumper. If adjustment is necessary, change the length of the splitter brackets until the fitment is good.



13. The splitter is now fully installed and the length can be adjusted on the go by loosening the bolts on the bottom of the splitter. Congratulations!

