


ST TRACKPARTS

BMW E82


**Door Pull Strap Conversion
Install Guide**

1. Remove doorpanel and uninstall the original door handle by pressing on the clips.

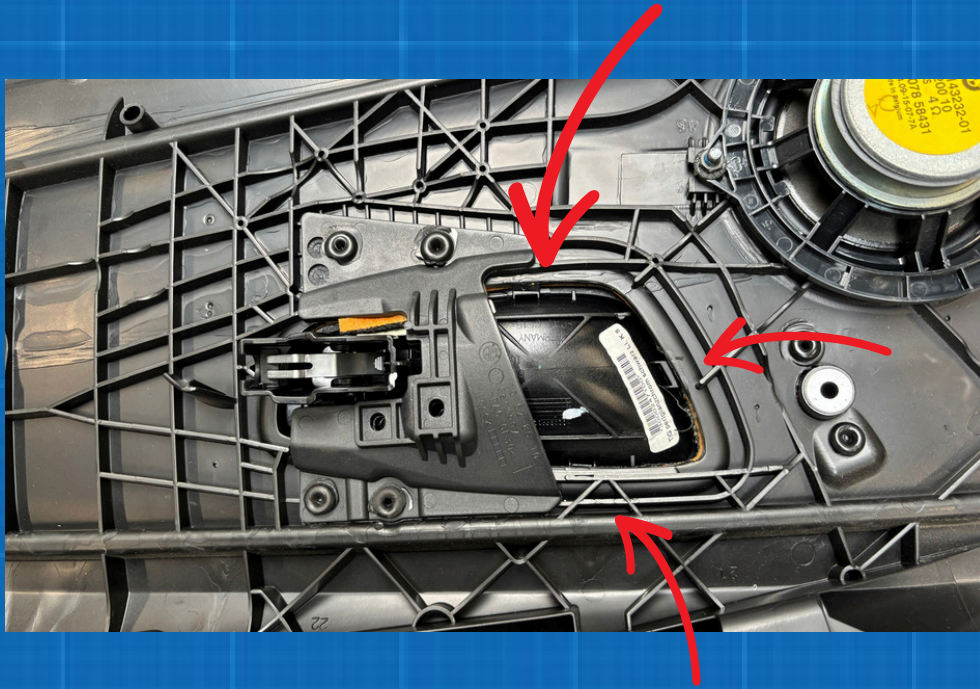

2. Install the cover by sliding it in.

3. Tighten the cover by installing the M4 bolt on the rear of the doorpanel.

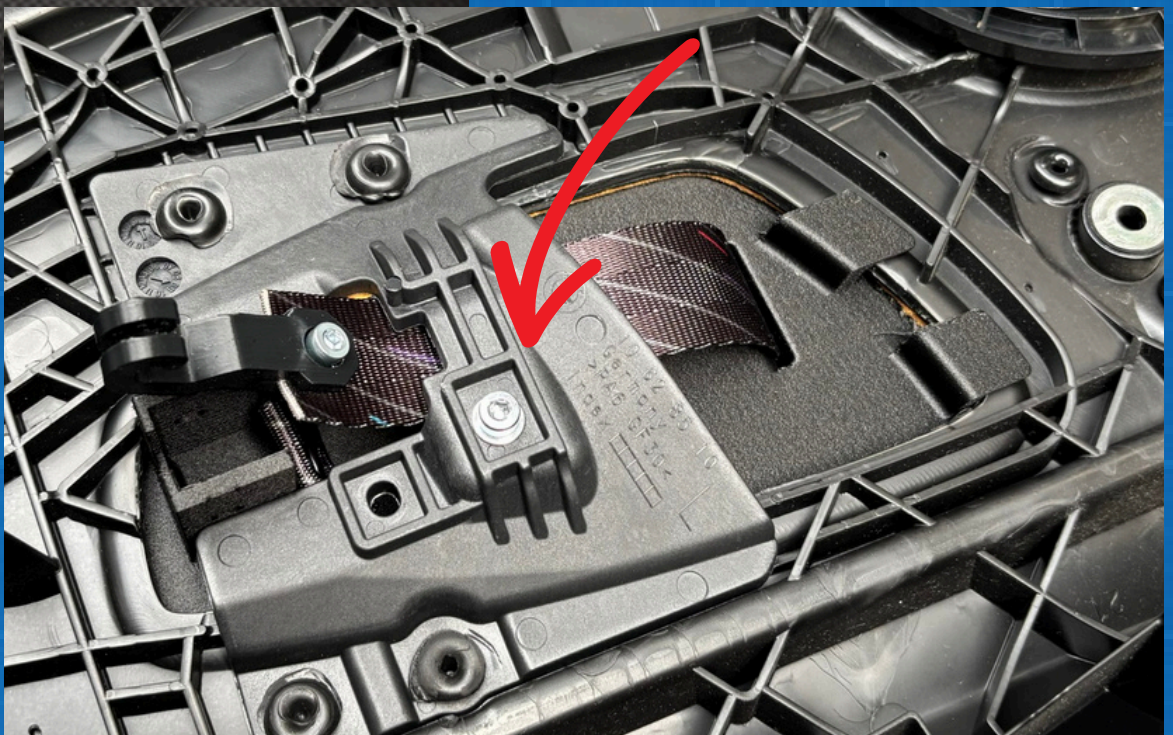

4. Install the hook that is connected to the strap to the cable in the white case. Pull on it until it clicks in place.

5. Secure the cable with the included zip tie.

6. Done! Enjoy.

