


ST TRACKPARTS

BMW E87

**Door Pull Strap Conversion
Install Guide**


1. Remove doorpanel and uninstall the original door handle by pressing on the clips.

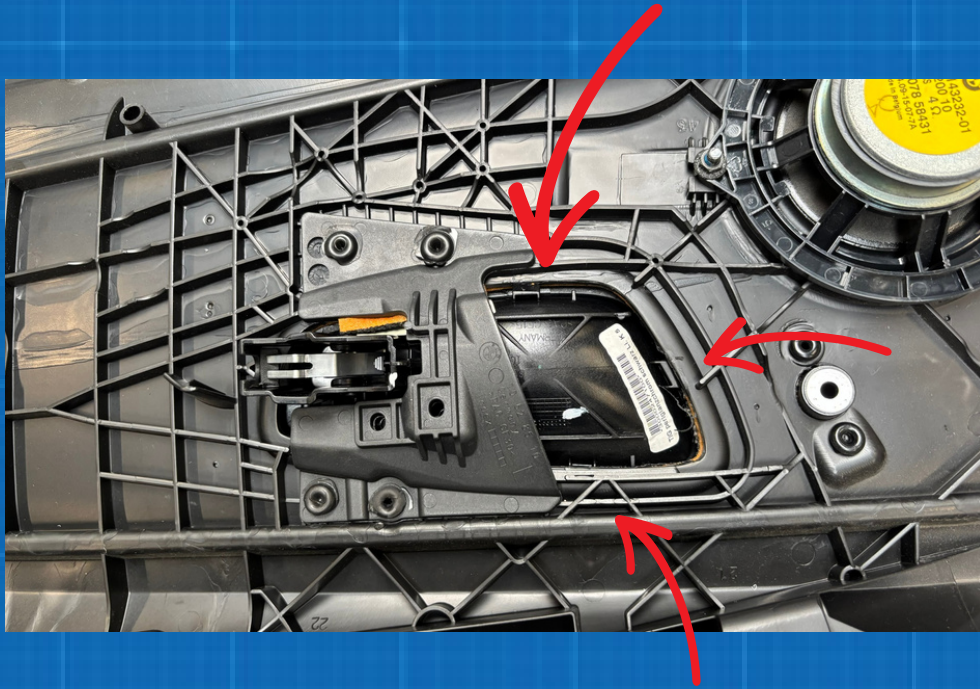

2. Reinstall the doorpanel without the handle. Make sure the white connector is sticking out.



3. Install the hook that is connected to the strap to the cable in the white case. Pull on it until it clicks in place.

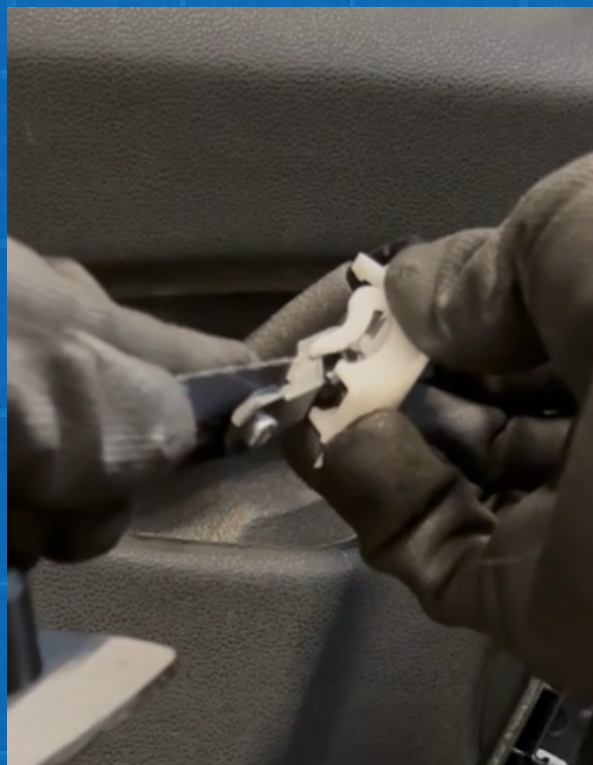


4. Install the provided ziptie into the new cover.

5. Install the white connector onto the cover. Tighten the ziptie tightly.



6. Slide the cover into the doorpanel.

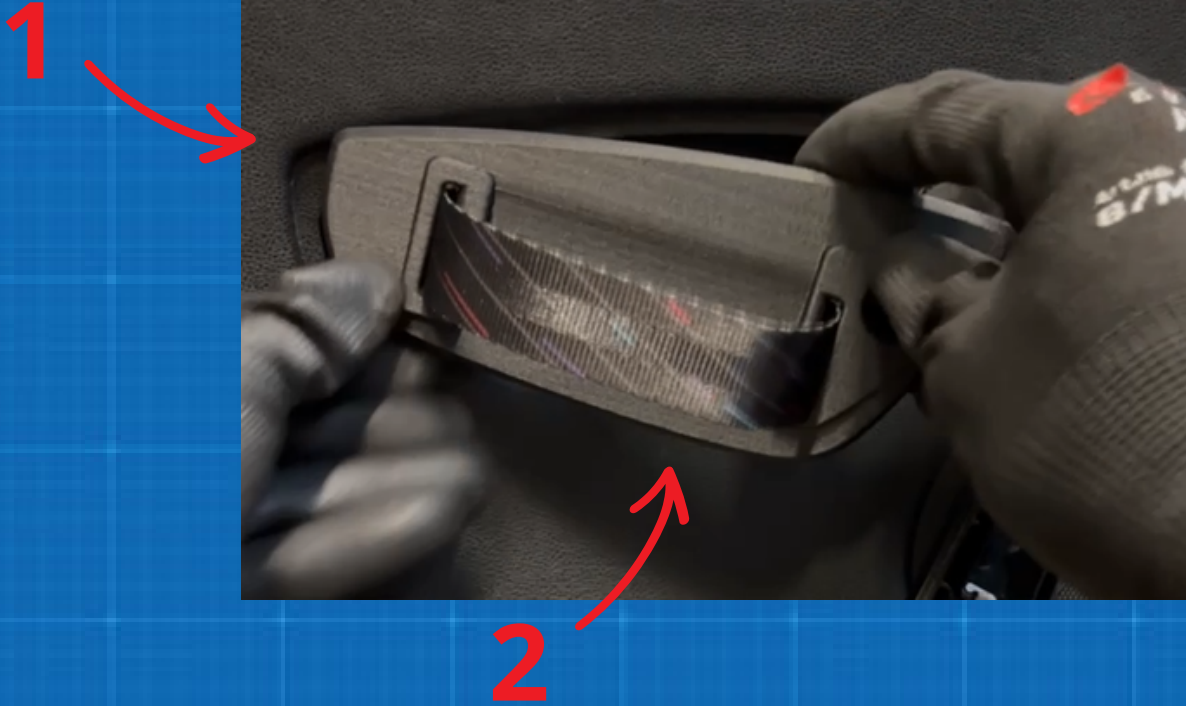

7. Reuse the original screw (from the door handle) to tighten the new doorhandle cover.



8. Use the included cap to hide the screw.
(Optional)

9. Done!

