


ST TRACKPARTS

**BMW E92 Door Pull Conversion
Install Guide**

1. Remove doorpanel and uninstall the original door handle.
2. Install the cable holder out of the conversion kit using two zipties. Tighten well.
3. Install the white part of the cable into the cable holder. Push it in until it sits flush, tighten with ziptie. It is essential that everything until now is solid.



4. Mount the cable in the suited original brackets

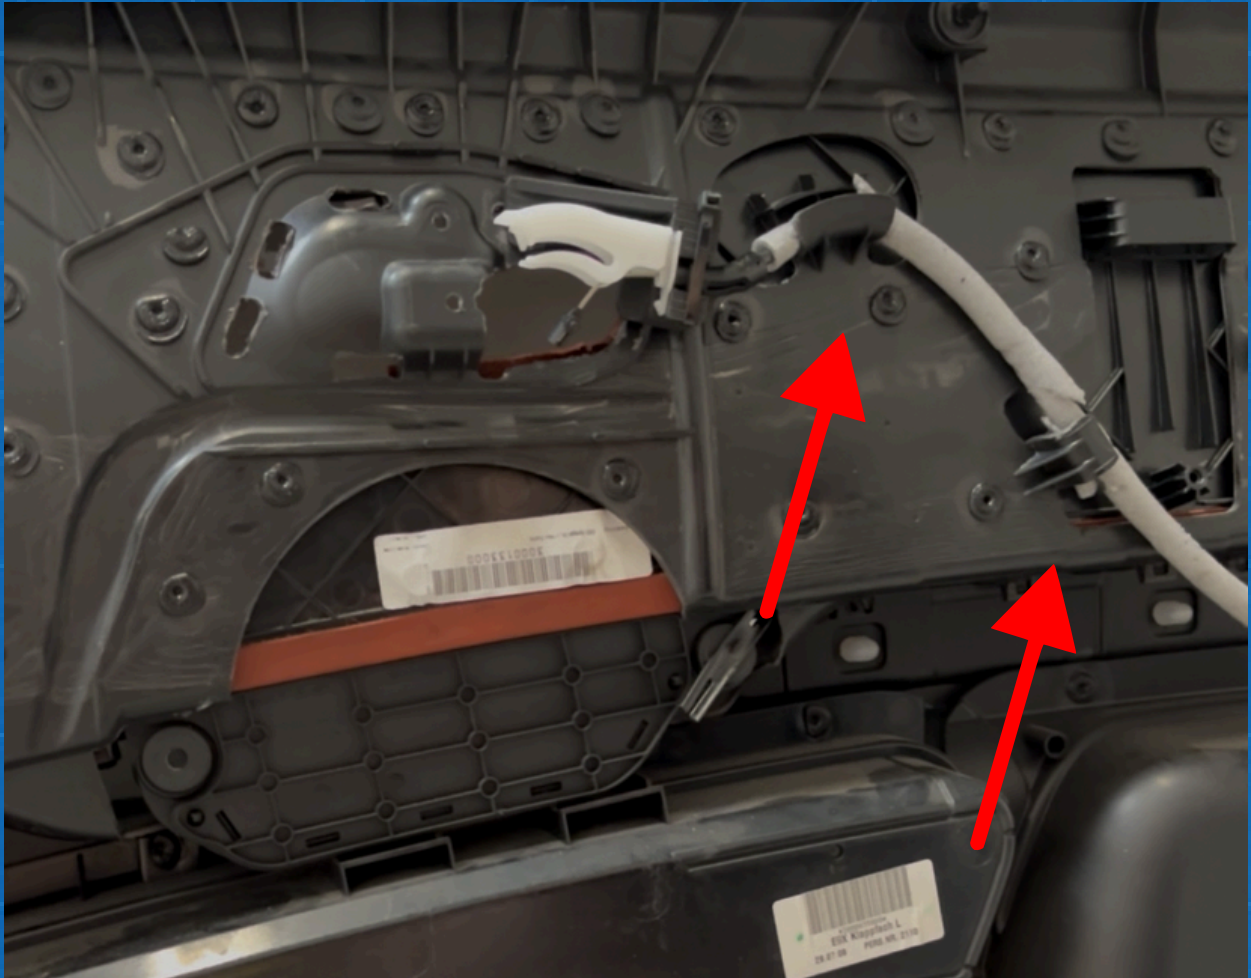


5. Slide the cover into the doorpanel such as seen on the first picture. Align the cover and tighten the M4x20 Allen bolt. Use an M4 washer with M4 locking nut on back of the doorpanel.



6. On the back of the doorpanel, slide the cable end out of the white plastic part.

7. Slide it into the conversion kit connector. When you pull it in you should hear a click.

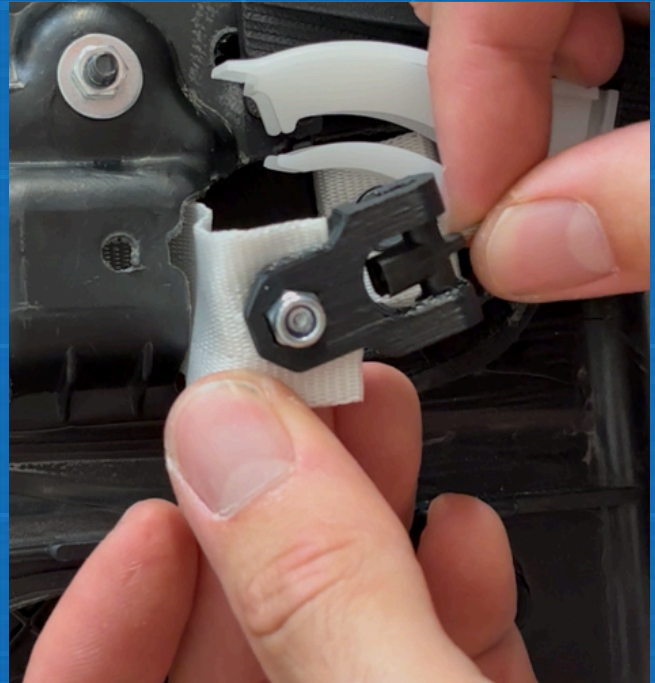

8. Reinstall the cable to the unlocking mechanism.

9. Install doorpanel with your new door pull straps installed.

10. Enjoy!

