


ST TRACKPARTS

**BMW F80/F82
Door Pull Conversion
Install Guide**

1. Remove doorpanel and uninstall the original door handle.
2. Install the cover by sliding it in.
3. Tighten the cover by installing the two M6 bolts on the rear of the doorpanel.
4. Install the black countersunk bolt on the front of the cover, and tighten using a washer and locking nut on the rear of the doorpanel.

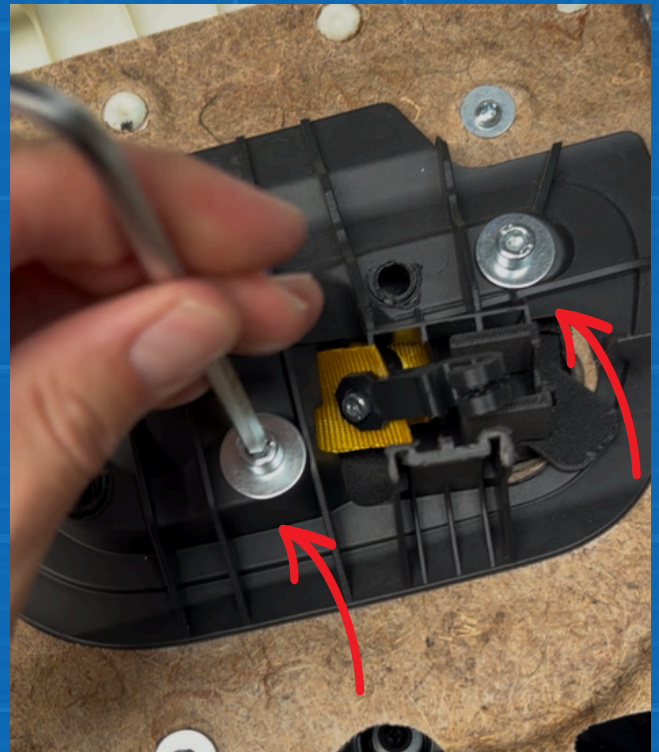

5. Install the ziptie such as on the first picture.

6. Install the hook that is connected to the (yellow) strap to the cable in the white case. Pull on it until it clicks in place.

7. Install the cable case into the cover. It should click in place. Secure with zip-tie.

8. Done! Enjoy.

