

ST TRACKPARTS

BMW F87 M2 F20/F21/F22

Door Pull Conversion

Install Guide

1. Remove doorpanel and uninstall the original door handle.
2. Install the cover by sliding it in.
3. Install the cover bracket on the back of the doorpanel.




4. Install the mounting block on the door, on the position of the door pull. Make sure "TOP" is facing up.



5. Install the white cable holder into the back of the cover. Add a ziptie to secure it, make sure it is tight and can't be removed by pulling.

6. Install the cable into the connector. You should hear a distinct "click" when you pull it in.

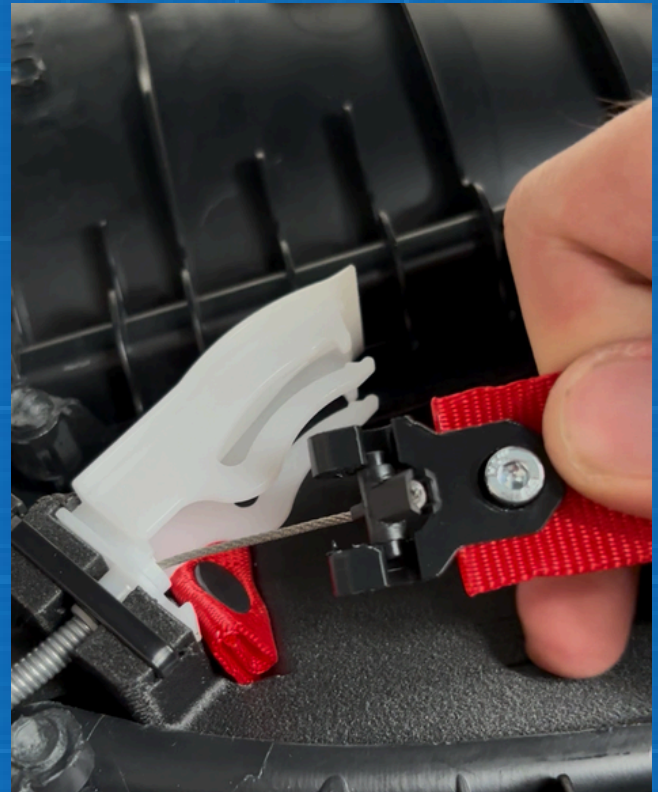

5. Install the white cable holder into the back of the cover. Add a ziptie to secure it, make sure it is tight and can't be removed by pulling.

6. Install the cable into the connector. You should hear a distinct "click" when you pull it in.

7. Bolt the cover to the mounting block. Don't overtighten.

8. Finished. Repeat for other side. ENJOY!

