


ST TRACKPARTS

**BMW G82 M4
Door Pull Conversion Kit
Install Guide**

1. Remove door panel. There are 3 TORX20 bolts holding it and clips all around.

2. Drill out the silicone which holds the door handle frame. We used an 8mm bit. You only need to remove the top part.

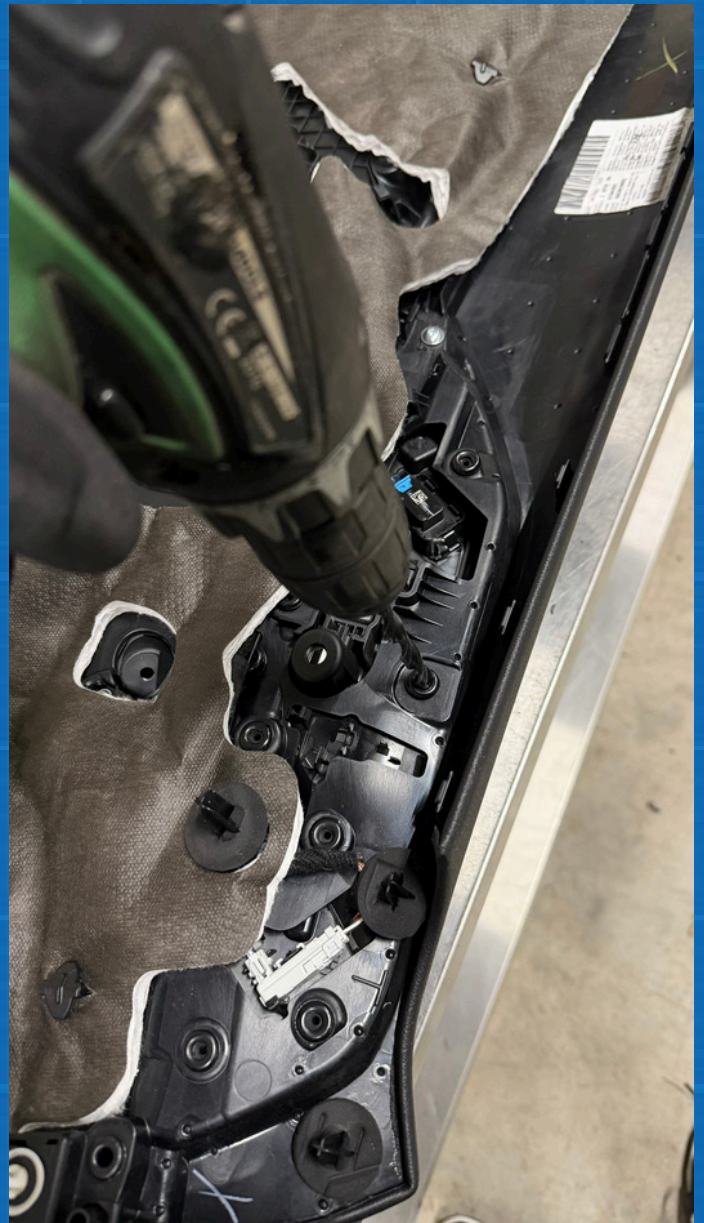

3. Remove the bolt holding the end of the door handle frame.



4. Now push out the door handle. It should come out easy. Otherwise check if you missed a silicone part.





5. Remove the bolt holding the end of the door handle frame.



6. Disconnect the wires from the door handle frame.
7. Drill the plastic shaft out from the top. You don't have to drill all the way through, eventually you can pull it out. We used a 4.5mm drill bit, you can also use smaller ones.




8. Install the swivel (1) with the washer (2) at the bottom. Push the shaft (3) through from the top to secure it. Now push the shaft lock (4) onto the shaft to hold it in place.

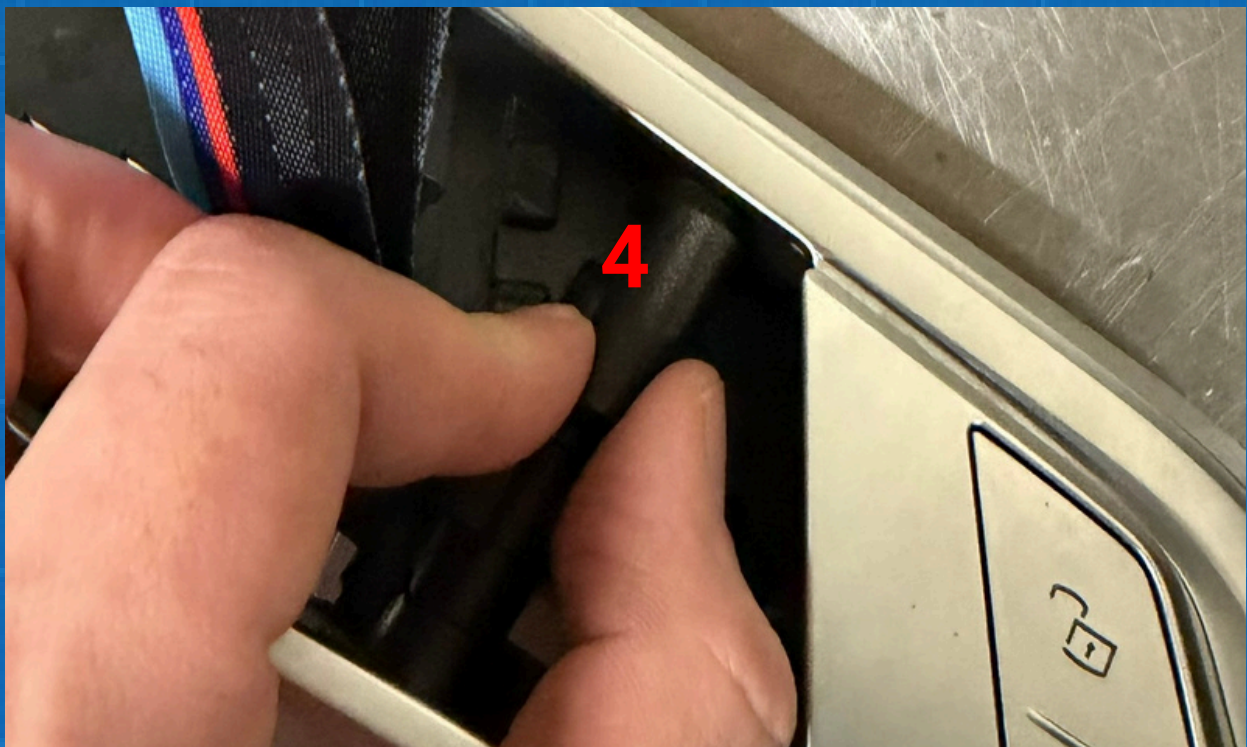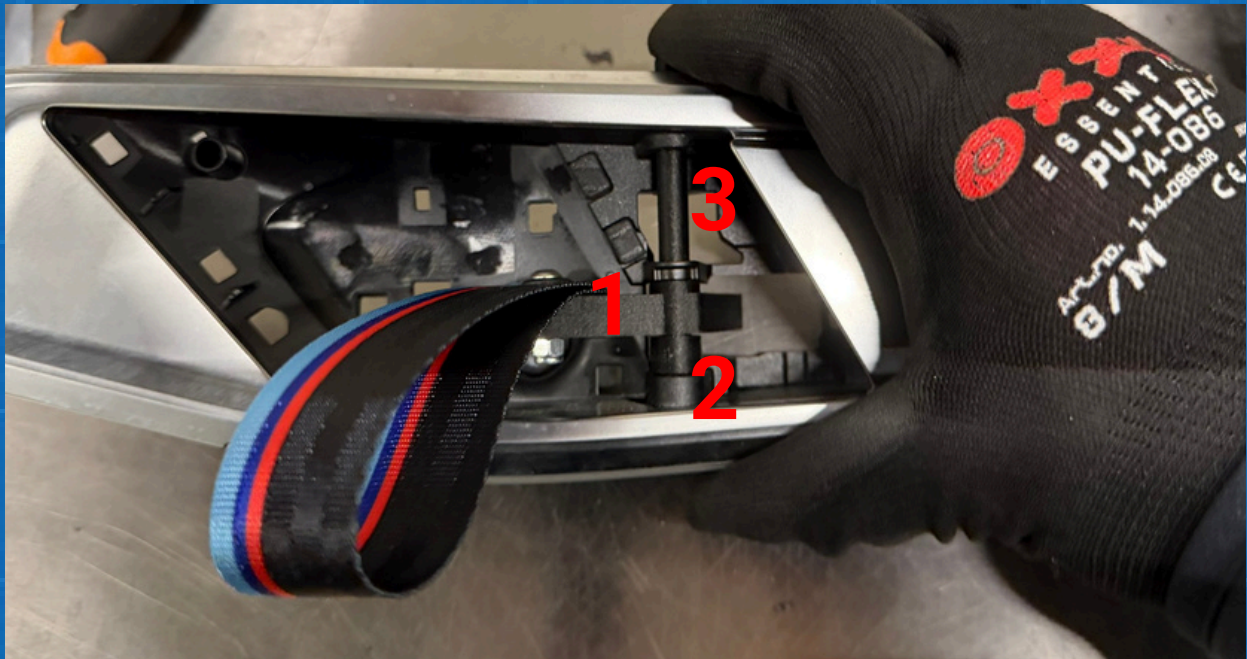


9.UPDATE: Add an M7 washer at the top and bottom of the swivel.



10. To reinstall the door frame handle, simply install the bolt that you removed in (3).
11. Install the doorpanel
12. Reinstall the 3 door panel torx bolts, including the one that goes onto the door handle frame.

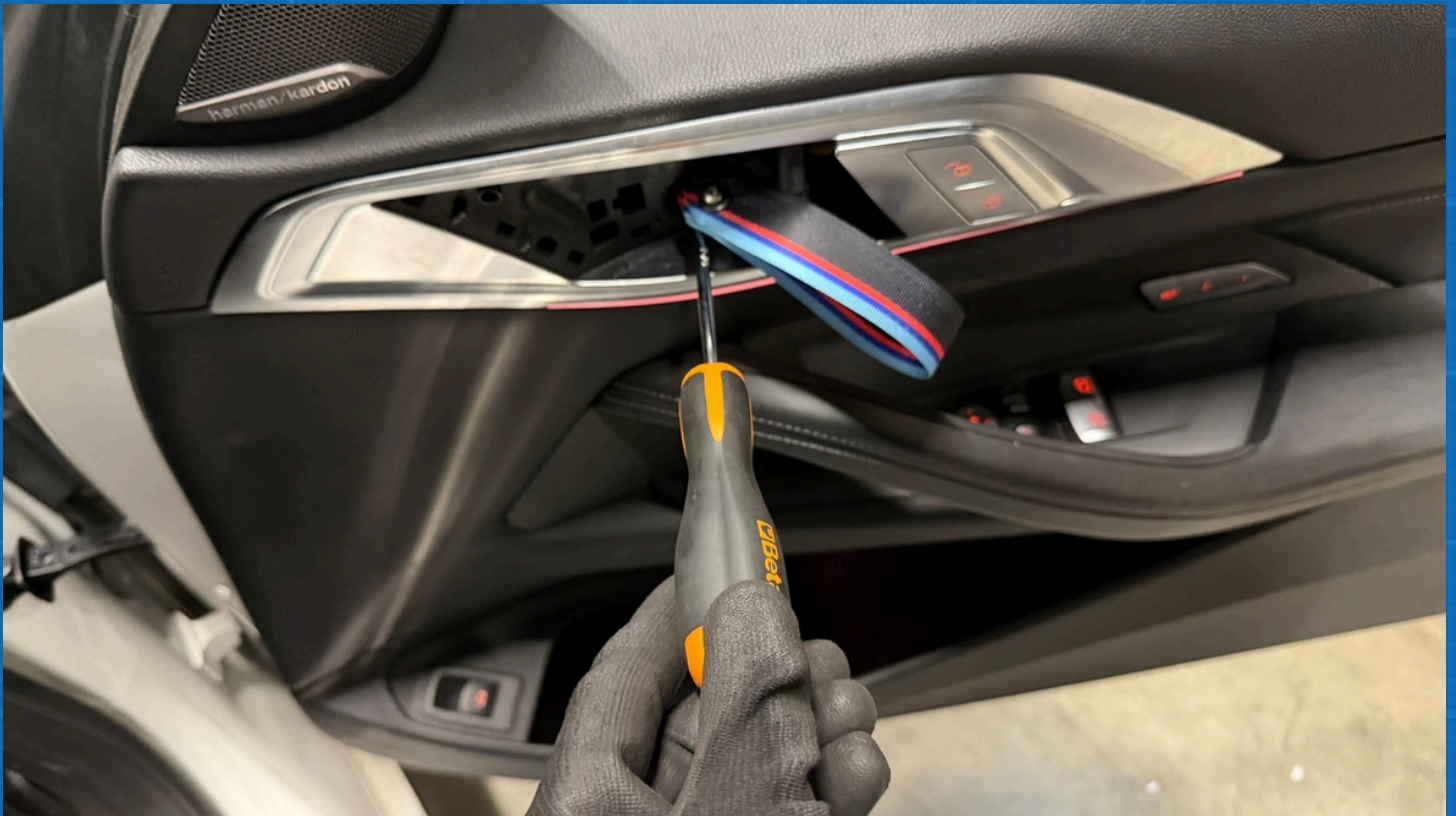

12. Install the door pull cover. Push the clips in first. Then push on the top to squeeze it in.

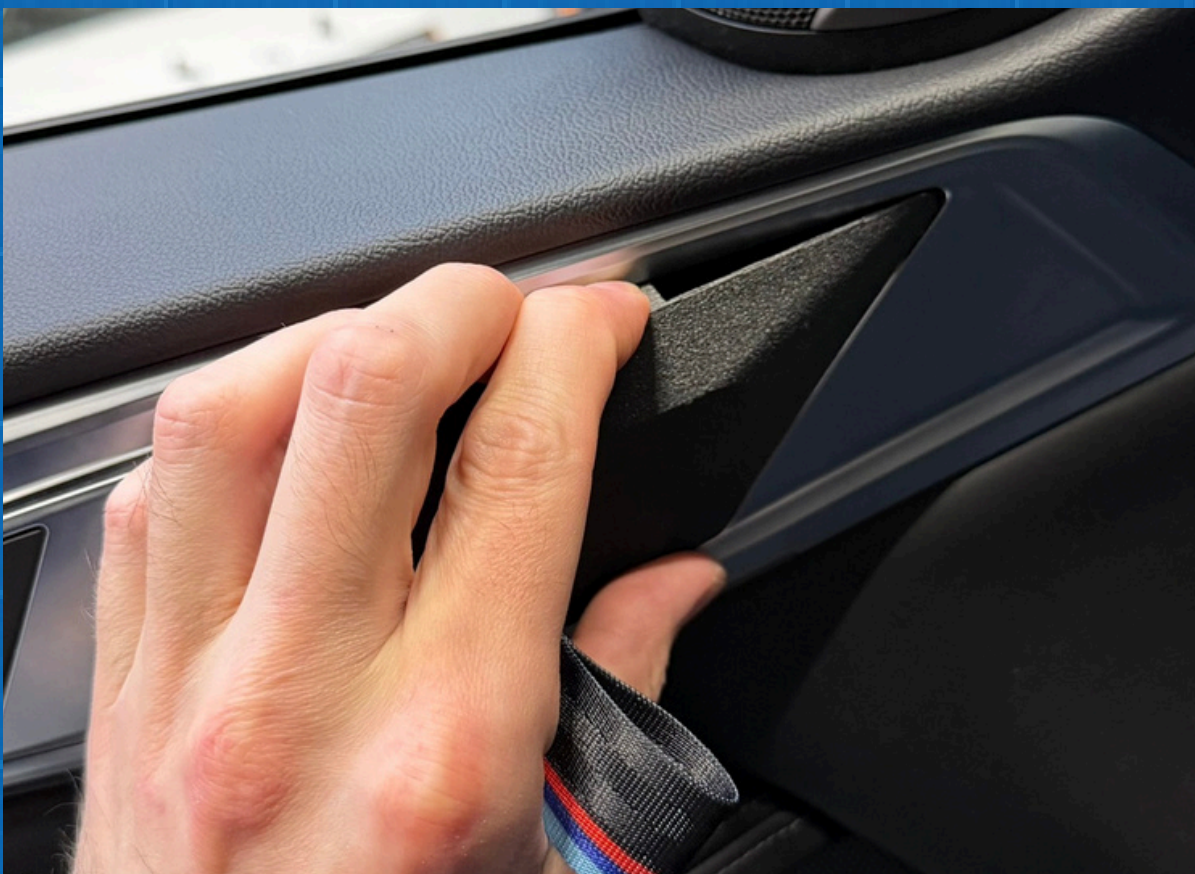

13. Push from the end and the cover should pop in place. Done!

