



BMW G87 M2

Canards

Install Guide




Tip: Use tapes to mark the final position before sticking the canards on.



Tip: Install the lower canard first. Use tapes to mark the final position before installing them.


REFERENCES LOWER CANARD

1. 1cm between front of canards and body line.
2. 10cm between inside of front bumper to top of lower canard.
3. Top of lower canard right against the body line.

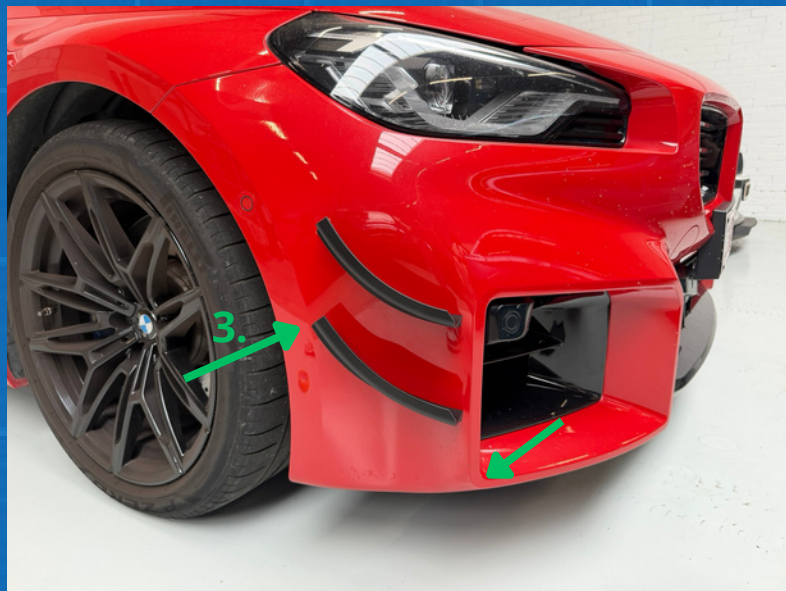

REFERENCES UPPER CANARD

1. Top of upper canard aligns with bottom of side sensor.
2. Bottom of upper canard aligns with top of front sensor.

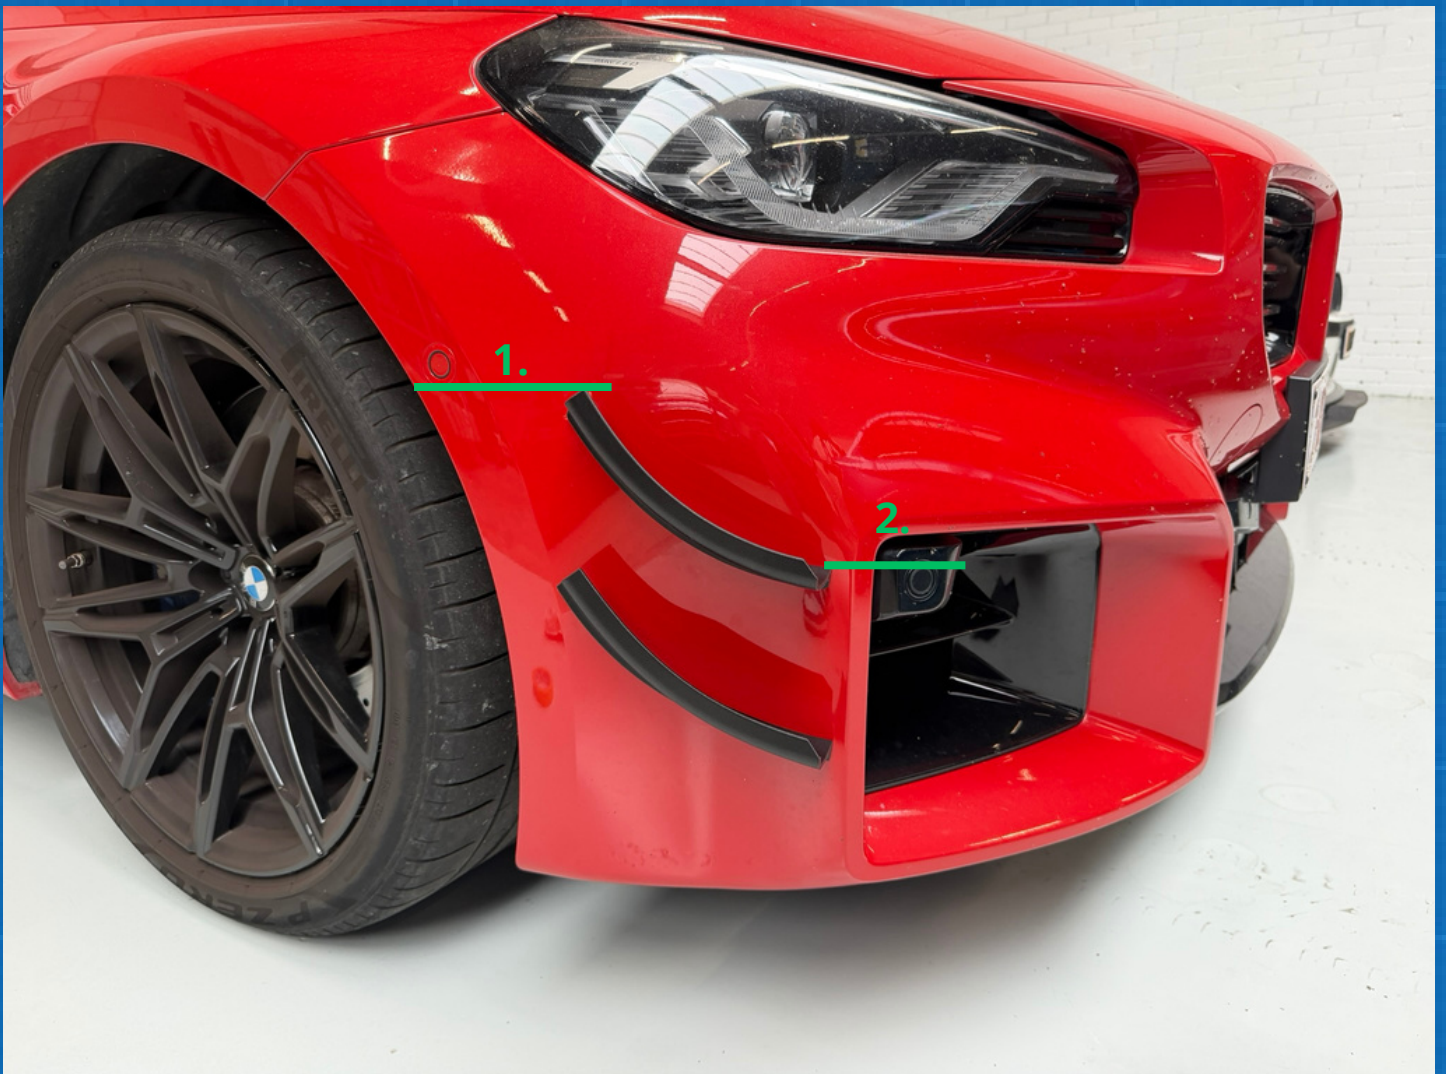

Enjoy!



Enjoy!